



1897681

Thames Cheval Mirror

Parts and Hardware List

| | | |
|----|---------------------------|-------|
| A. | Mirror Assembly | 1 pc |
| B. | Feet Assemblies | 2 pcs |
| C. | Wood Stretcher | 1 pc |
| D. | Back Stretcher | 1 pc |
| E. | Brass Stretchers | 2 pcs |
| F. | Cast Dutch Bolts | 2 pcs |
| G. | Small Rubber Washers | 2 pcs |
| H. | Big Rubber Washers | 2 pcs |
| I. | Wood Caps | 8 pcs |
| J. | Allen Head Bolts | 8 pcs |
| K. | Lock Washers | 8 pcs |
| L. | Flat Washers | 8 pcs |
| M. | Pan Head Wood Screws | 2 pcs |
| N. | Phillips Head Screwdriver | 1 pc |
| O. | Allen Head Wrench | 1 pc |


- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.




1897681

Thames Cheval Mirror

Hardware Illustrations

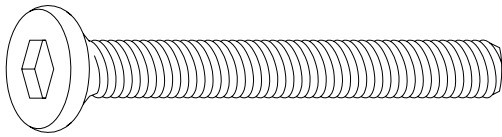


J. Allen Head Bolt




L. Flat Washer



M. Pan Head Wood Screw




K. Lock Washer




G. Small Rubber Washer



I. Wood Cap



H. Big Rubber Washer

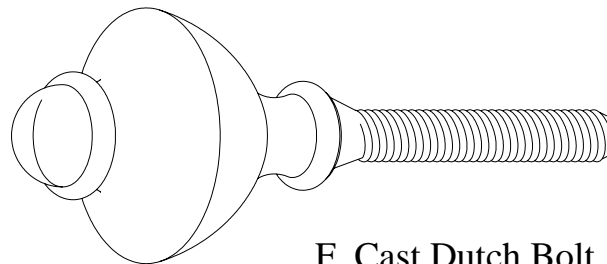

F. Cast Dutch Bolt



1897681

Thames Cheval Mirror

Assemble the Mirror Frame

Parts required

| | | | | | |
|----|------------------|-------|----|---------------------------|-------|
| B. | Feet Assemblies | 2 pcs | K. | Lock Washers | 8 pcs |
| C. | Wood Stretcher | 1 pc | L. | Flat Washers | 8 pcs |
| D. | Back Stretcher | 1 pc | M. | Pan Head Wood Screws | 2 pcs |
| E. | Brass Stretchers | 2 pcs | N. | Phillips Head Screwdriver | 1 pc |
| I. | Wood Caps | 8 pcs | O. | Allen Head Wrench | 1 pc |
| J. | Allen Head Bolts | 8 pcs | | | |

1. **Assemble the Feet (B)** Align the pre-threaded holes on the Wood Stretcher (C) with the pre-threaded holes on the Feet Assemblies (B). Secure with Allen Head Bolts (J), Lock Washers (K) and Flat Washers (L) using the Allen Head Wrench (O).
2. **Attach Brass Stretchers (E)** Align the pre-threaded holes on the Brass Stretchers (E) with the pre-threaded holes on the Feet Assemblies (B). Secure with Allen Head Bolts (J), Lock Washers (K) and Flat Washers (L) using the Allen Head Wrench (O).
3. **Attach Back Stretcher (D)** Align the pre-drilled holes on Back Stretcher (D) with the pre-drilled holes on the Feet Assemblies (B) & secure with Pan Head Wood Screws (M) using the Phillips Head Screwdriver (N). See Illustration #1.

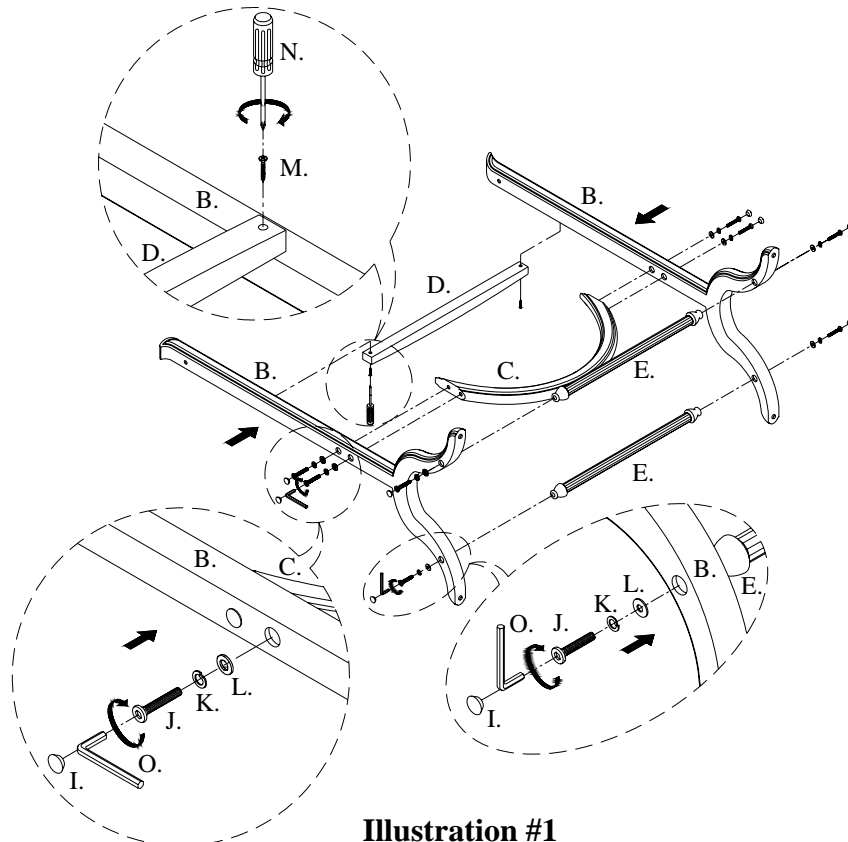


Illustration #1

Assemble the Mirror



1897681

Thames Cheval Mirror

Parts required

| | | | | | |
|----|------------------|-------|----|----------------------|-------|
| A. | Mirror Assembly | 1 pc | G. | Small Rubber Washers | 2 pcs |
| F. | Cast Dutch Bolts | 2 pcs | H. | Big Rubber Washers | 2 pcs |

4. **Attach Mirror Assembly (A)** Place the Small Rubber Washers (G) over the exposed threads of the Cast Dutch Bolts (F) and insert through the pre-drilled holes of the Feet Assemblies (B). Place the Big Rubber Washers (H) onto the exposed threads of the Cast Dutch Bolts (F). Carefully align the pre-threaded holes of the Mirror Assembly (A) with the threads of the Cast Dutch Bolts (F) and secure by turning in a clockwise direction. See Illustration #2.

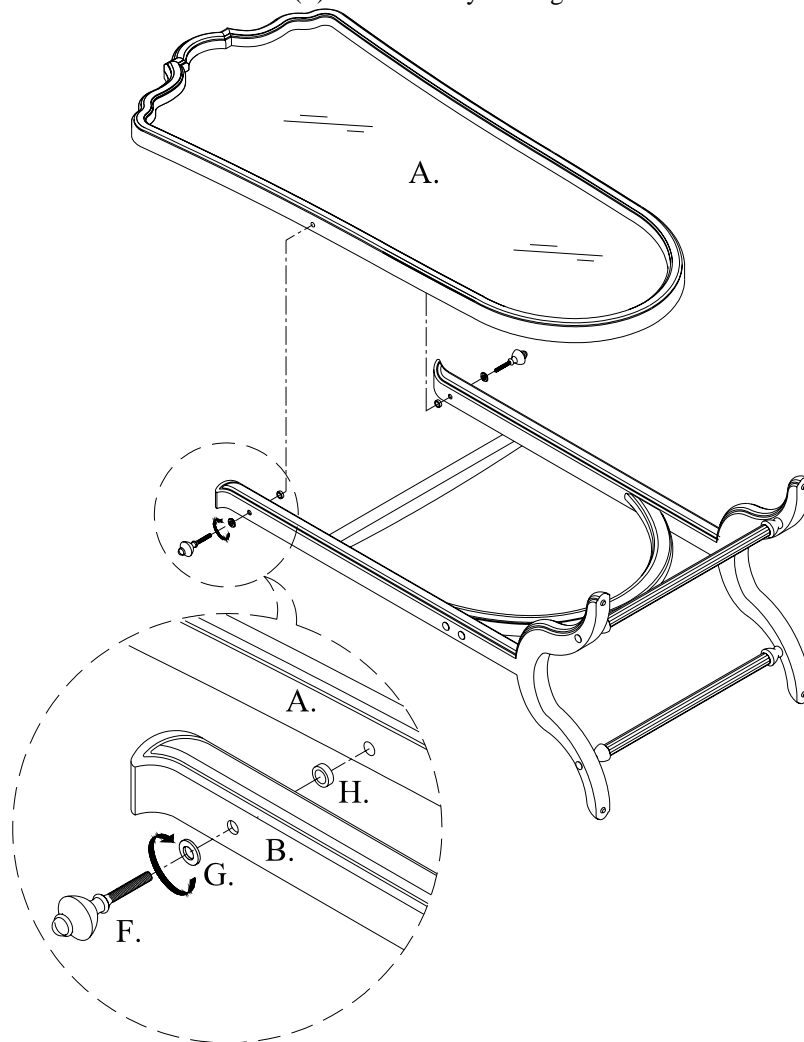


Illustration #2